tempo theatre

Vertical Light LED

VL1 POST MOUNT



INSTALLATION INSTRUCTIONS

Ratings, Hardware and Warning	Page 1
Installation Instructions	Page 2-3

ELECTRICAL RATINGS

The Vertical Light is a low voltage system, operating at 12V.

HARDWARE PROVIDED (BY OTHERS)

- 1) #26 Drill Bit (.147")
- 2) ½" Drill Bit
- 3) Hand Drill
- 4) Phillips Screw Driver

WARNING:



This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Turn off main power supply before you start installing Vertical Light.

06007 REV.B 6-11-15 ECN-0445 Page 1 of 3

tempo theatre


Vertical Light LED

VL1 POST MOUNT

INSTALLATION

STEP 1

After locating desired mounting height for VL1 on the 1½" diameter rail, mark and drill three mounting holes, using the base plate, on outside of rail, as shown in **Figure 1, 2 & 3**, using the #26 drill bit.

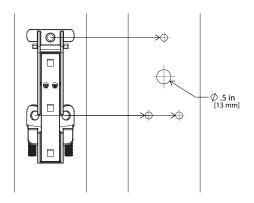

STEP 2

From center of top hole, measure and mark 0.75 of an inch down as shown in **Figure 3**, and drill using ½" drill bit, as shown in **Figure 4**.





Figure 1

Figure 2







Figure 4



06007 REV.B 6-11-15 ECN-0445 Page 2 of 3

tempo theatre

Vertical Light LED

VL1 POST MOUNT

INSTALLATION (continued)

STEP 3

Drop attached conduit feed through center hole and mount fixture base using the 3 self-tapping screws provided, as shown in **Figure 5**.



Figure 5

STEP 4

Attach baffle to base and tighten set-screws, as shown in **Figure 6**.

STEP 5

Once fixture is mounted connect power to fixture by drilling a hole in the bottom of the Rail post to splice into power from raceway / step nose.



Figure 6

06007 REV.B 6-11-15 ECN-0445 Page 3 of 3